


PXP 40 PRINTER

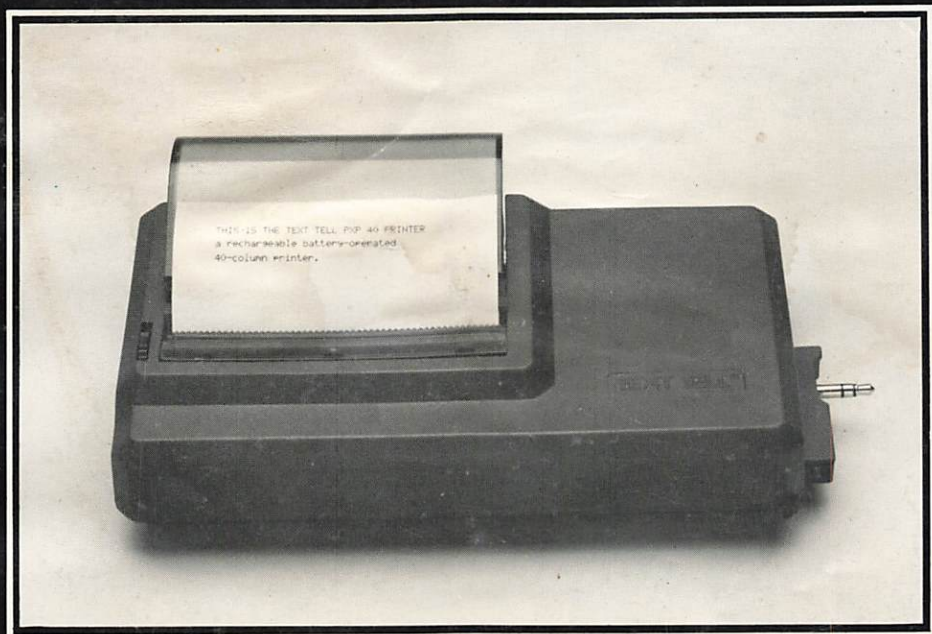

OPERATING INSTRUCTIONS

TEXT TELL

We bridge the communication gap

BEFORE STARTING TO OPERATE THE PXP FOR THE FIRST TIME, IT IS NECESSARY TO CHARGE THE BATTERIES (see fig. 2)

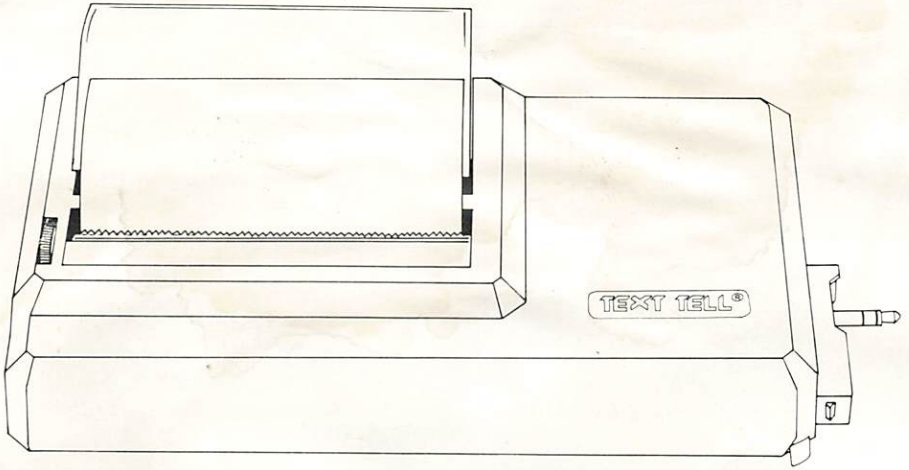


fig. 1

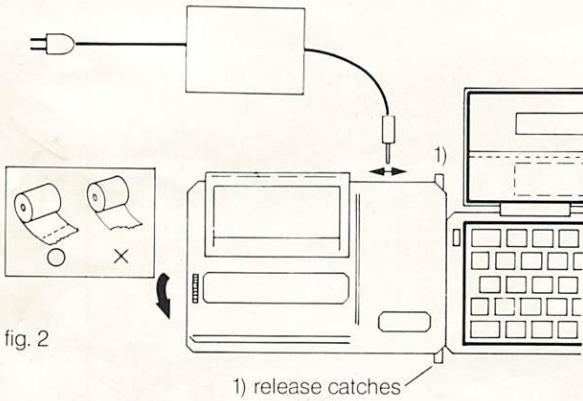


fig. 2

THE TEXT TELL PXP 40 PRINTER BOX CONTAINS:

- Text Tell PXP 40 Printer
- soft leather case
- instruction manual and guarantee certificate
- roll of thermal printing paper

USING THE PXP PRINTER

1. CONNECTING THE PRINTER TO THE PX

- a. Check that the printer is switched off.
- b. With the PX keyboard facing you, fit the PXP printer into the slot on the left side of the PX (see fig. 2).
- c. Switch the PX printer on with the **ON/OFF** switch at the rear of the unit.

2. TO PRINT A TEXT BLOCK

- a. Move the cursor to the text block concerned.
- b. Press **PRINT**.
N.B. It is advisable to set the **RIGHT MARGIN** to 40, when using the PXP 40.

3. TO LIST FIRST LINES OF ALL TEXT BLOCKS IN MEMORY Press **SHIFT + PRINT (= LIST)**.

4. TO PRINT ONE LINE AT A TIME

- a. Move the cursor to the line concerned.
- b. Press **RETURN**.
Each time you press **RETURN** the PXP will print out the next line.

5. TO INTERRUPT PRINTING

Press **ON/STOP**. This will interrupt the transfer of text to the printer. The printer will stop as soon as all text already transferred to printer 2K buffer memory has been printed out.

6. TO DISCONNECT THE PRINTER FROM THE PX

- a. Switch the printer off.
- b. Press the two release catches (fig. 2) on the sides of the PX.
- c. Pull the PXP carefully from the PX.

N.B. Do not forget to switch off the PXP after use or when charging.

RECHARGING THE PX AND PXP

If the PX is not used for a period of 50 seconds it will switch itself off automatically unless it is in the 'waiting to receive' or 'waiting to transmit' mode.

While charging the PX the send/receive lamp lights up.

The PXP printer will print approximately 2,000 lines of text on full batteries.

When the batteries are low the printer will print as a last line:

*** Batteries low, please recharge ***

The units can be charged separately by inserting the charger lead into the 3.5 mm socket on the left side of the PX or the rear of the PXP printer.

The units can also be charged simultaneously. To do this connect the PXP to the PX and insert the charger lead into the socket at the rear of the PXP printer.

Charging time is 10 to 12 hours.