 
 
 


FIELD AND DEPOT MAINTENANCE MANUAL

PP-3620

**POWER SUPPLY UNIT
DRAWINGS**



	RESISTOR		PNP TRANSISTOR		MECHANICAL COUPLING		LOW-PASS FILTER
	RESISTOR VARIABLE		NPN TRANSISTOR		STRUCTURAL EARTH		HIGH-PASS FILTER
	RESISTOR VARIABLE (PRESET)		FIELD EFFECT TRANSISTOR		REAL EARTH		BANDPASS FILTER
	NTC RESISTOR		BATTERY		PERMANENTLY CONDUCTIVE PATH		PULSE GENERATOR
	CAPACITOR		QUARTZ CRYSTAL		NON-PERMANENTLY CONDUCTIVE PATH		AMPLIFIER
	ELECTROLYTIC CAP.		SIGNAL LAMP		ON		RF OSCILLATOR
	LEAD-THROUGH CAP.		SOCKET CONNECTOR		OFF		AF OSCILLATOR
	COIL, WINDING		PIN CONNECTOR		INPUT		CRYSTAL OSCILLATOR
	TRANSFORMER		COAX. SOCKET CONNECTOR		OUTPUT		PHASE DISCRIMINATOR
	FERRITE BEAD		COAX. PIN CONNECTOR		ENGRAVED LEGEND		
	CONDUCTIVE FERROMAGNETIC CORE		TEST POINT		ALTERNATING CURRENT		
	NON-CONDUCTIVE FERROMAGNETIC CORE		MOTOR		DIRECT CURRENT		
	OPERATIONALLY VARIABLE		TELEPHONE		THERMAL SWITCH		
	PRESET VARIABLE		MICROPHONE		CIRCUIT BREAKER		
	SEMICONDUCTOR DIODE		LOUDSPEAKER				
	ZENER DIODE		MICROTELEPHONE				
	VARICAP		SCREENED LEAD				
	SWITCH		COAXIAL LEAD				
	2 POSITION SWITCH		AERIAL				
	4 POSITION SWITCH		MANUAL CONTROL				
	PUSHBUTTON SWITCH		MECHANICAL LINK				
	RELAY						

SYMBOLS
FIGURE 1

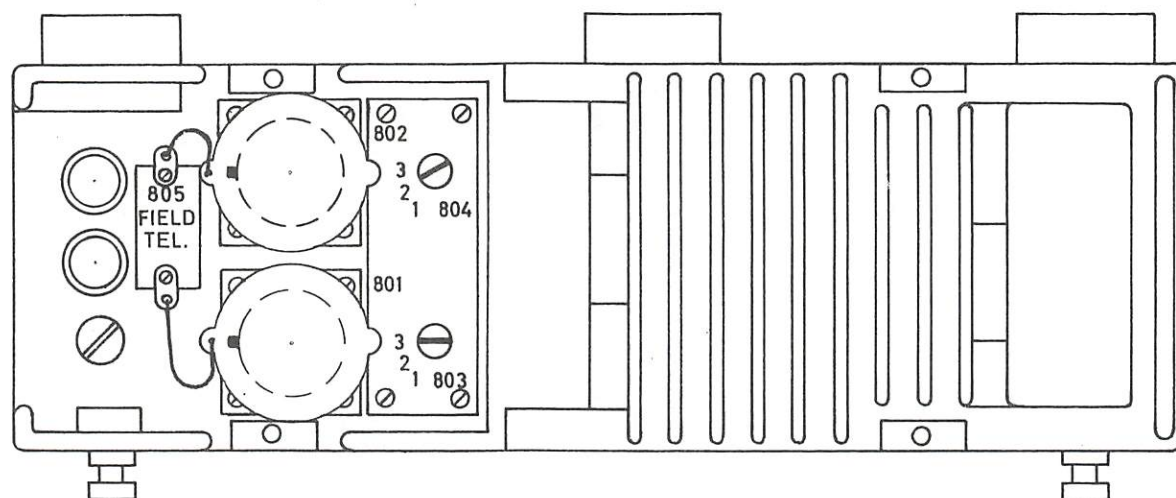


FIG. 2A FRONT VIEW


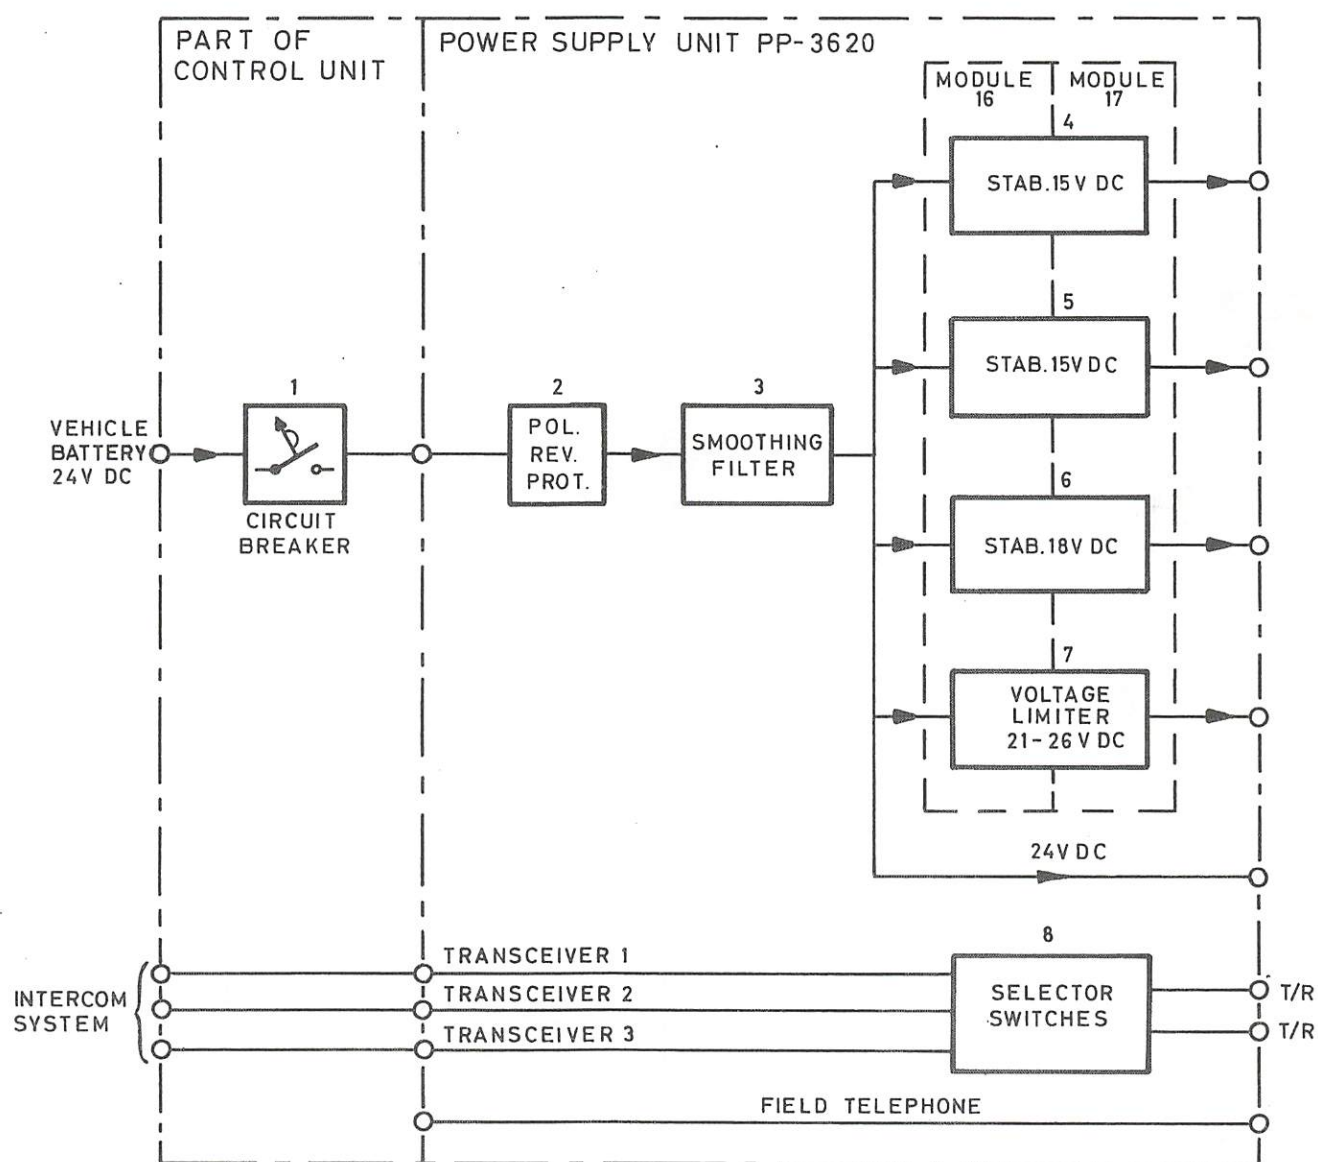



FIG. 2B BLOCK DIAGRAM








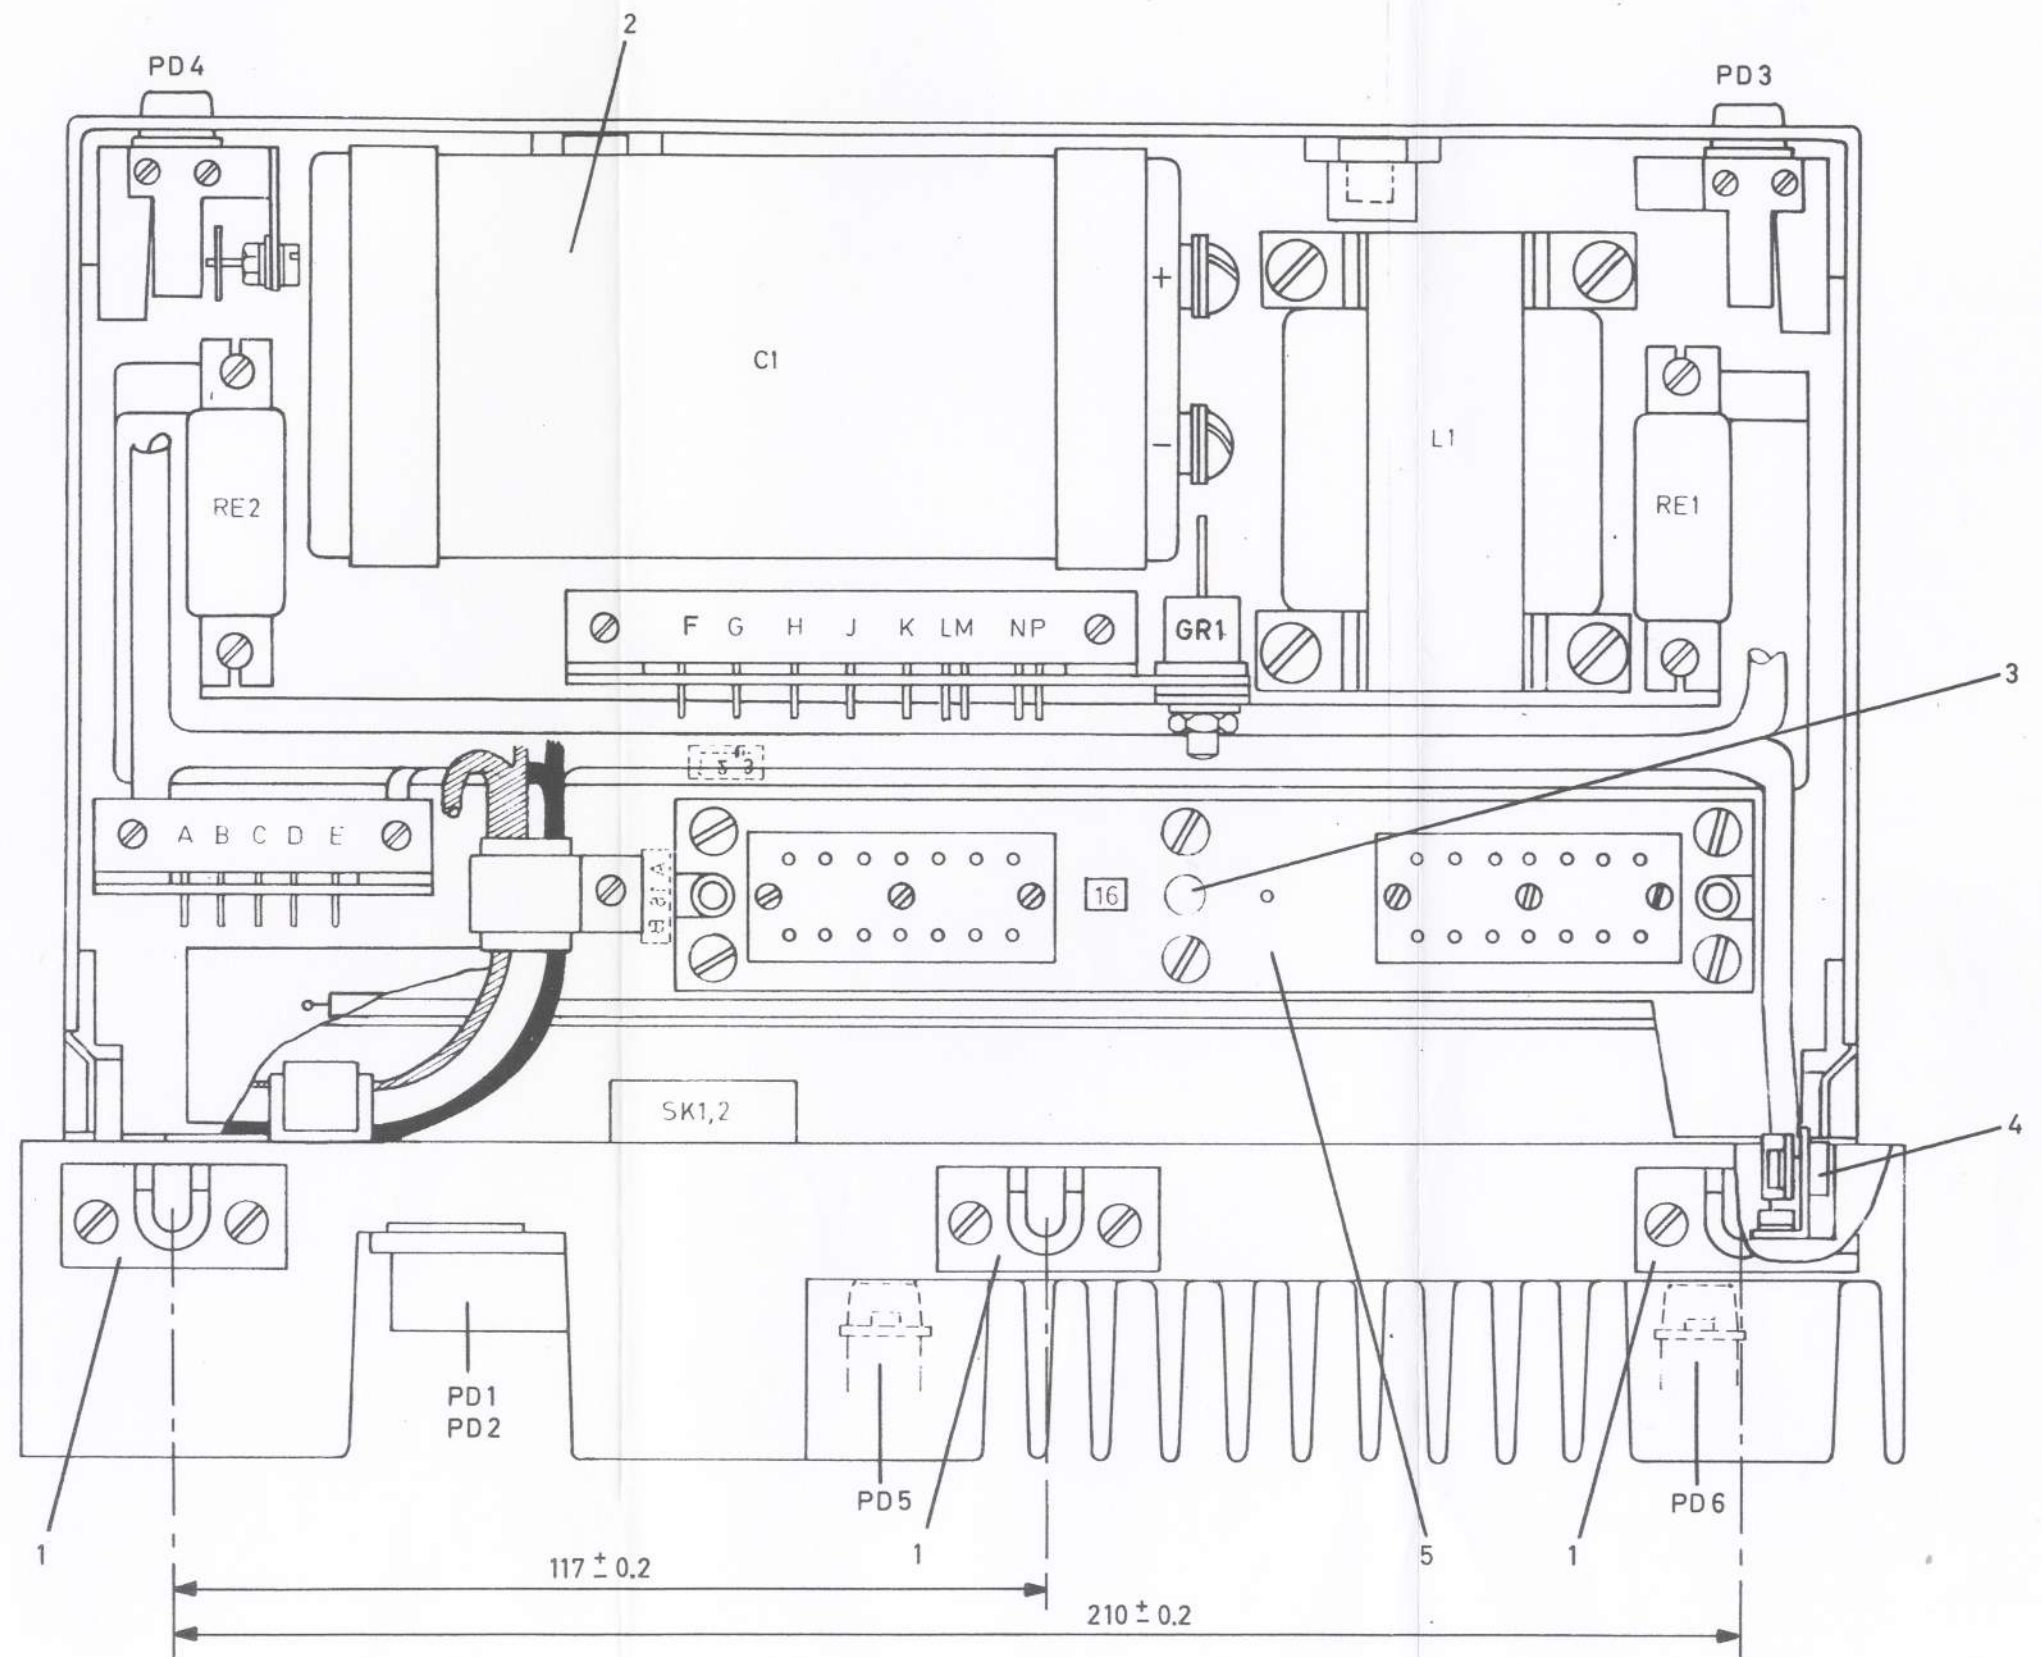


FRAME ASSEMBLY (MODULE 18)

FIGURE 4


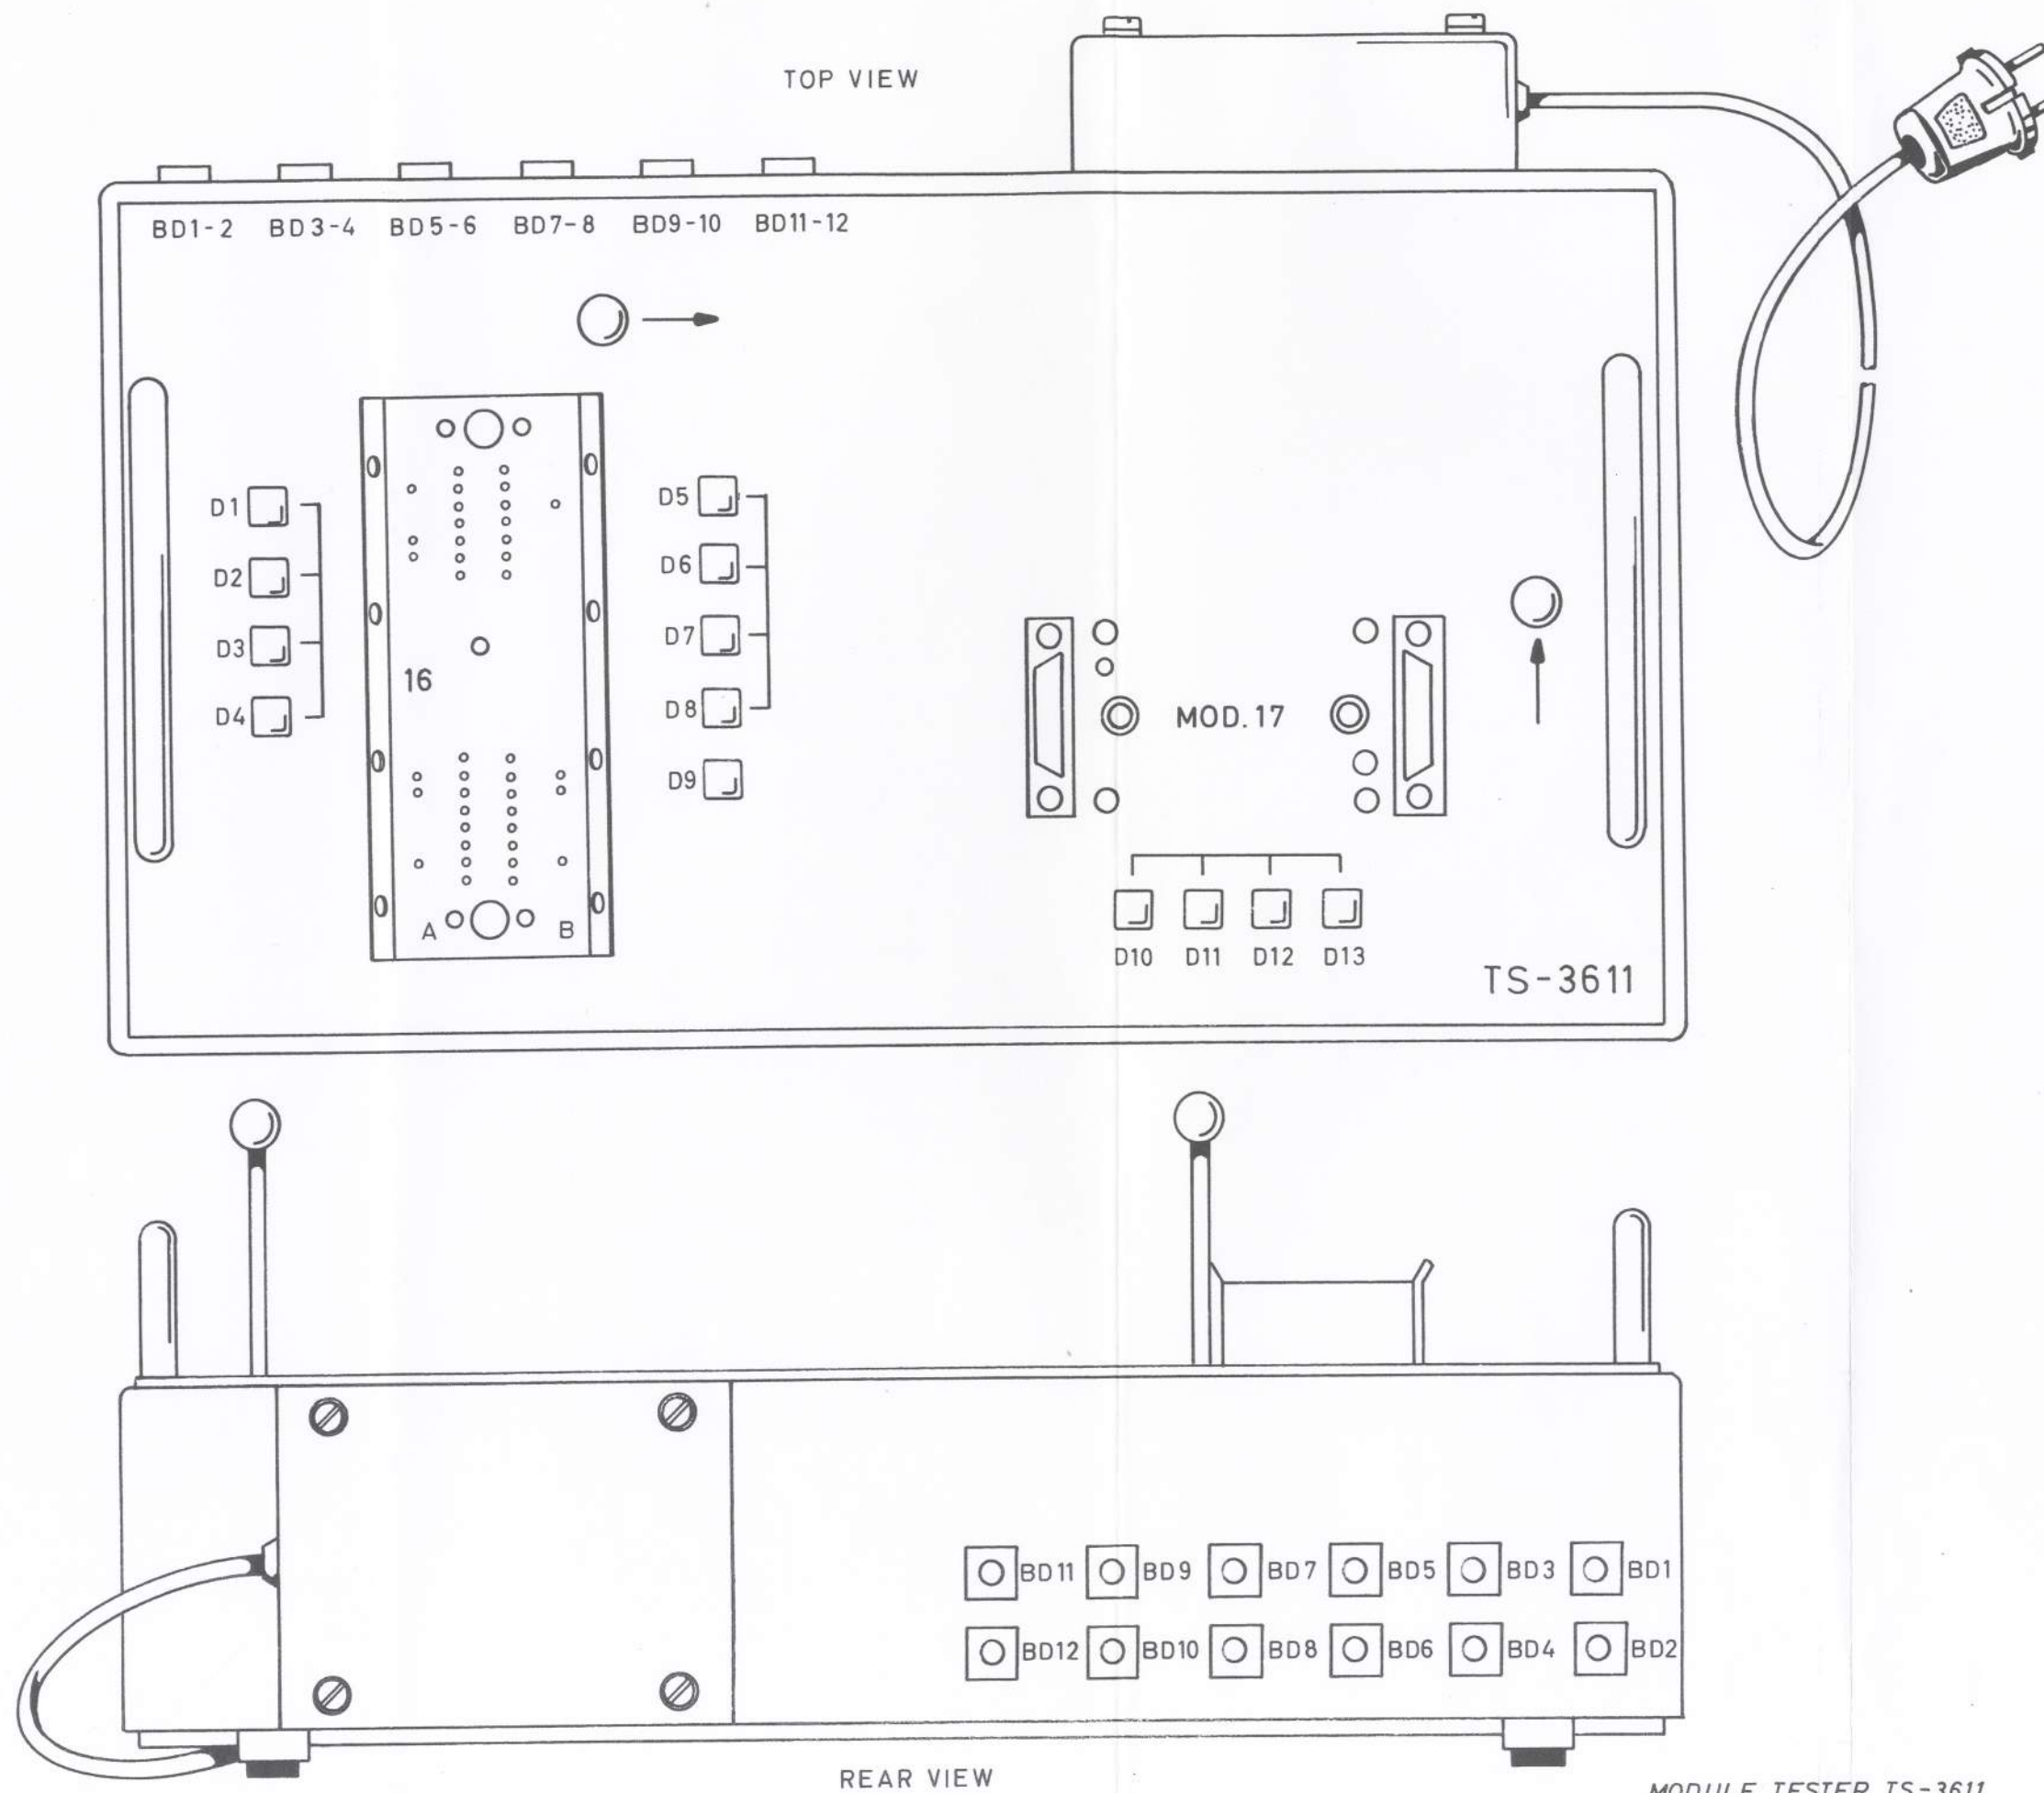


MODULE TESTER TS-3611
FIGURE 5

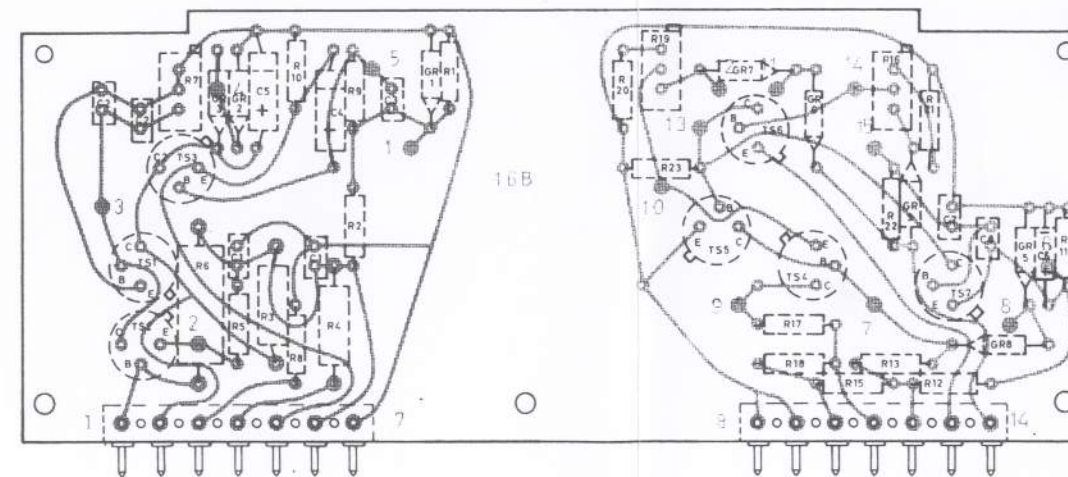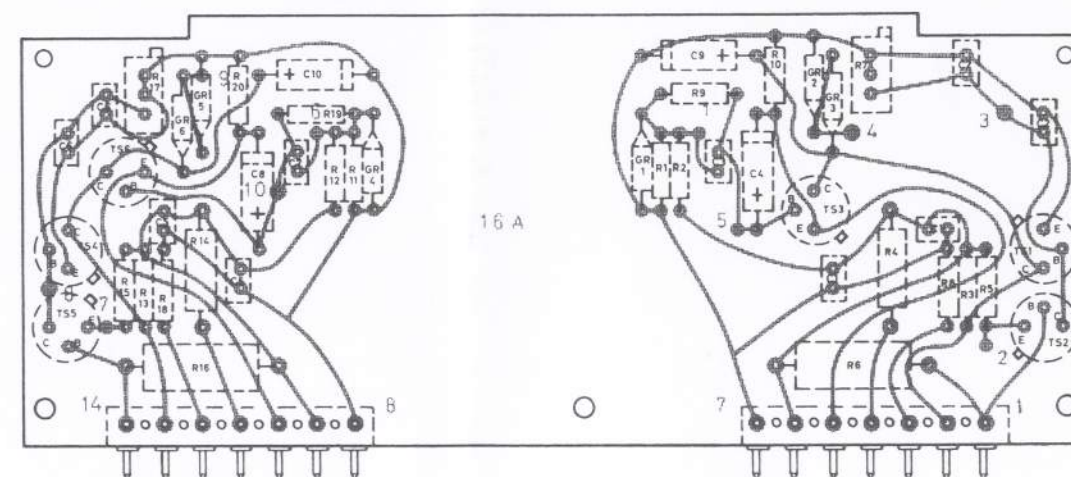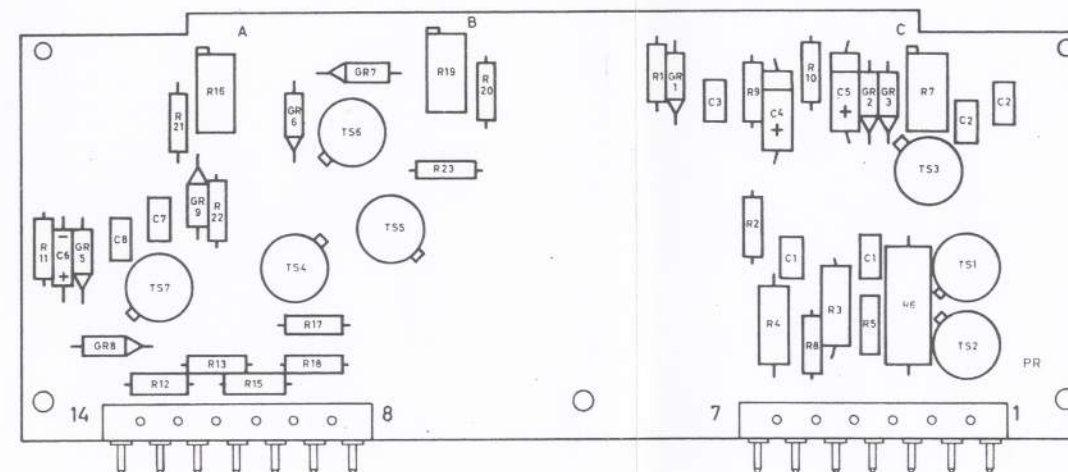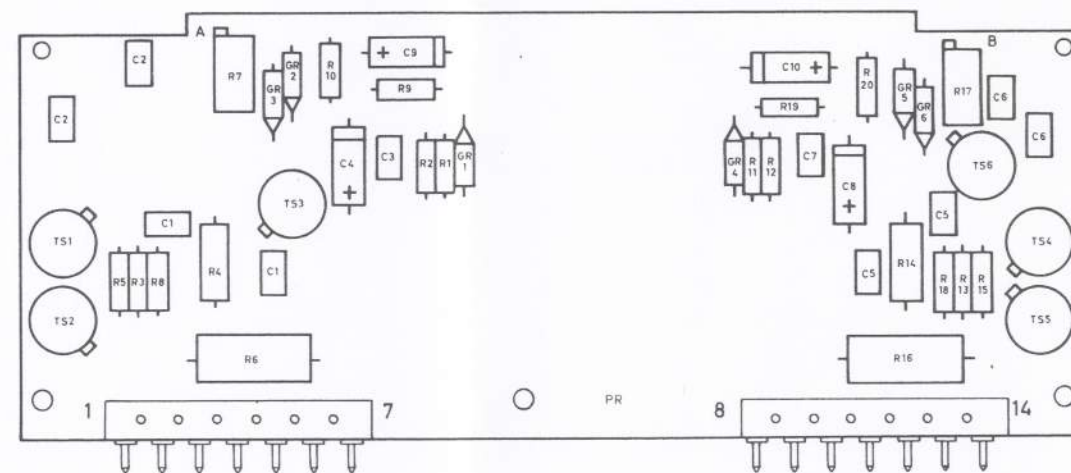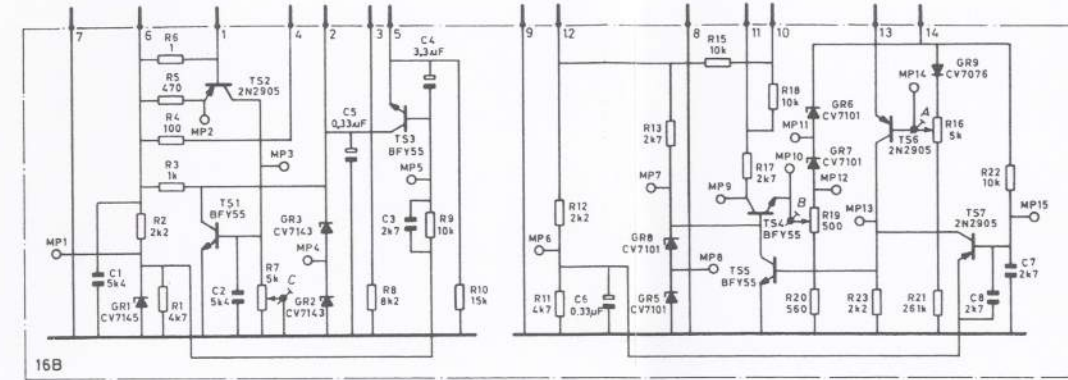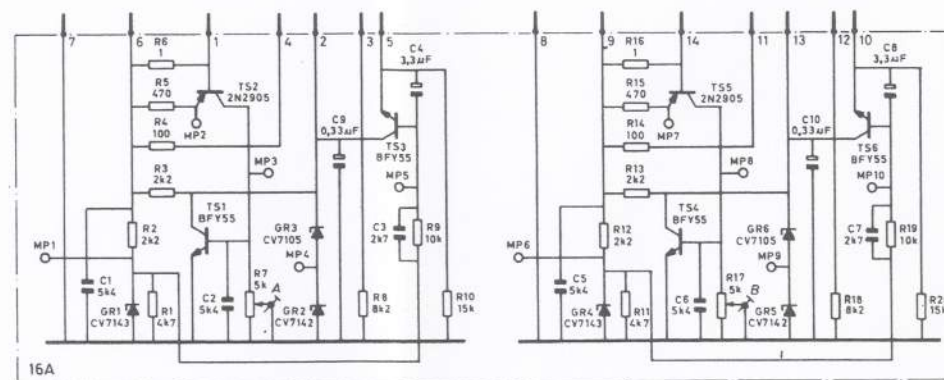


MODULE 16
FIGURE 6

N.V. PHILIPS' TELECOMMUNICATIE INDUSTRIE ——— Copyright reserved

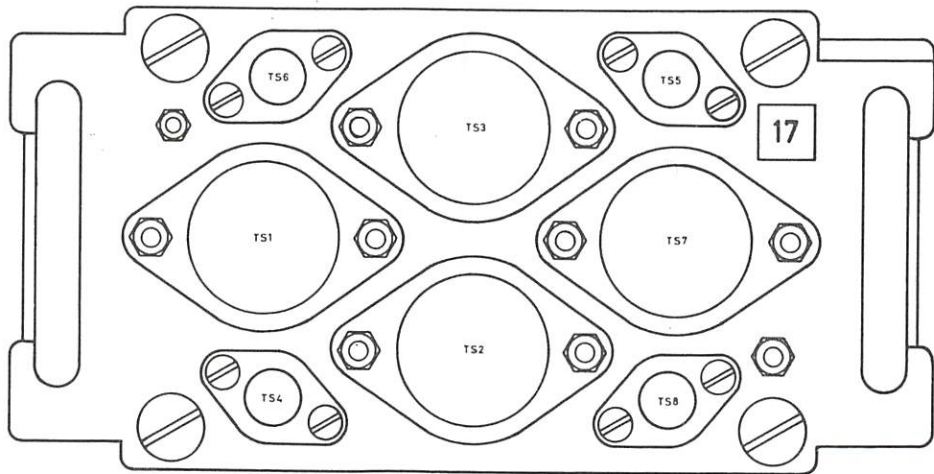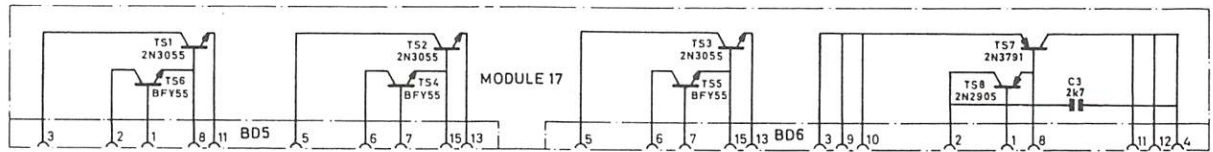


WIRING HARNESS 1


WIRING HARNESS 2

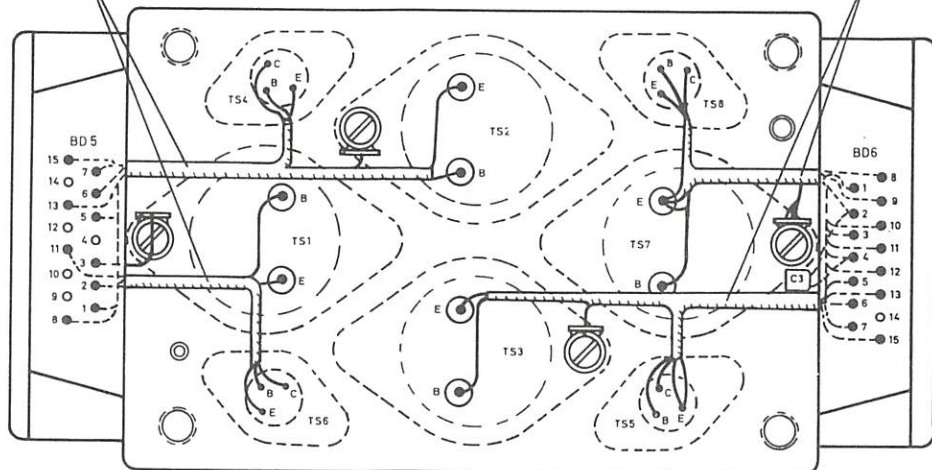

MODULE 17
FIGURE 7

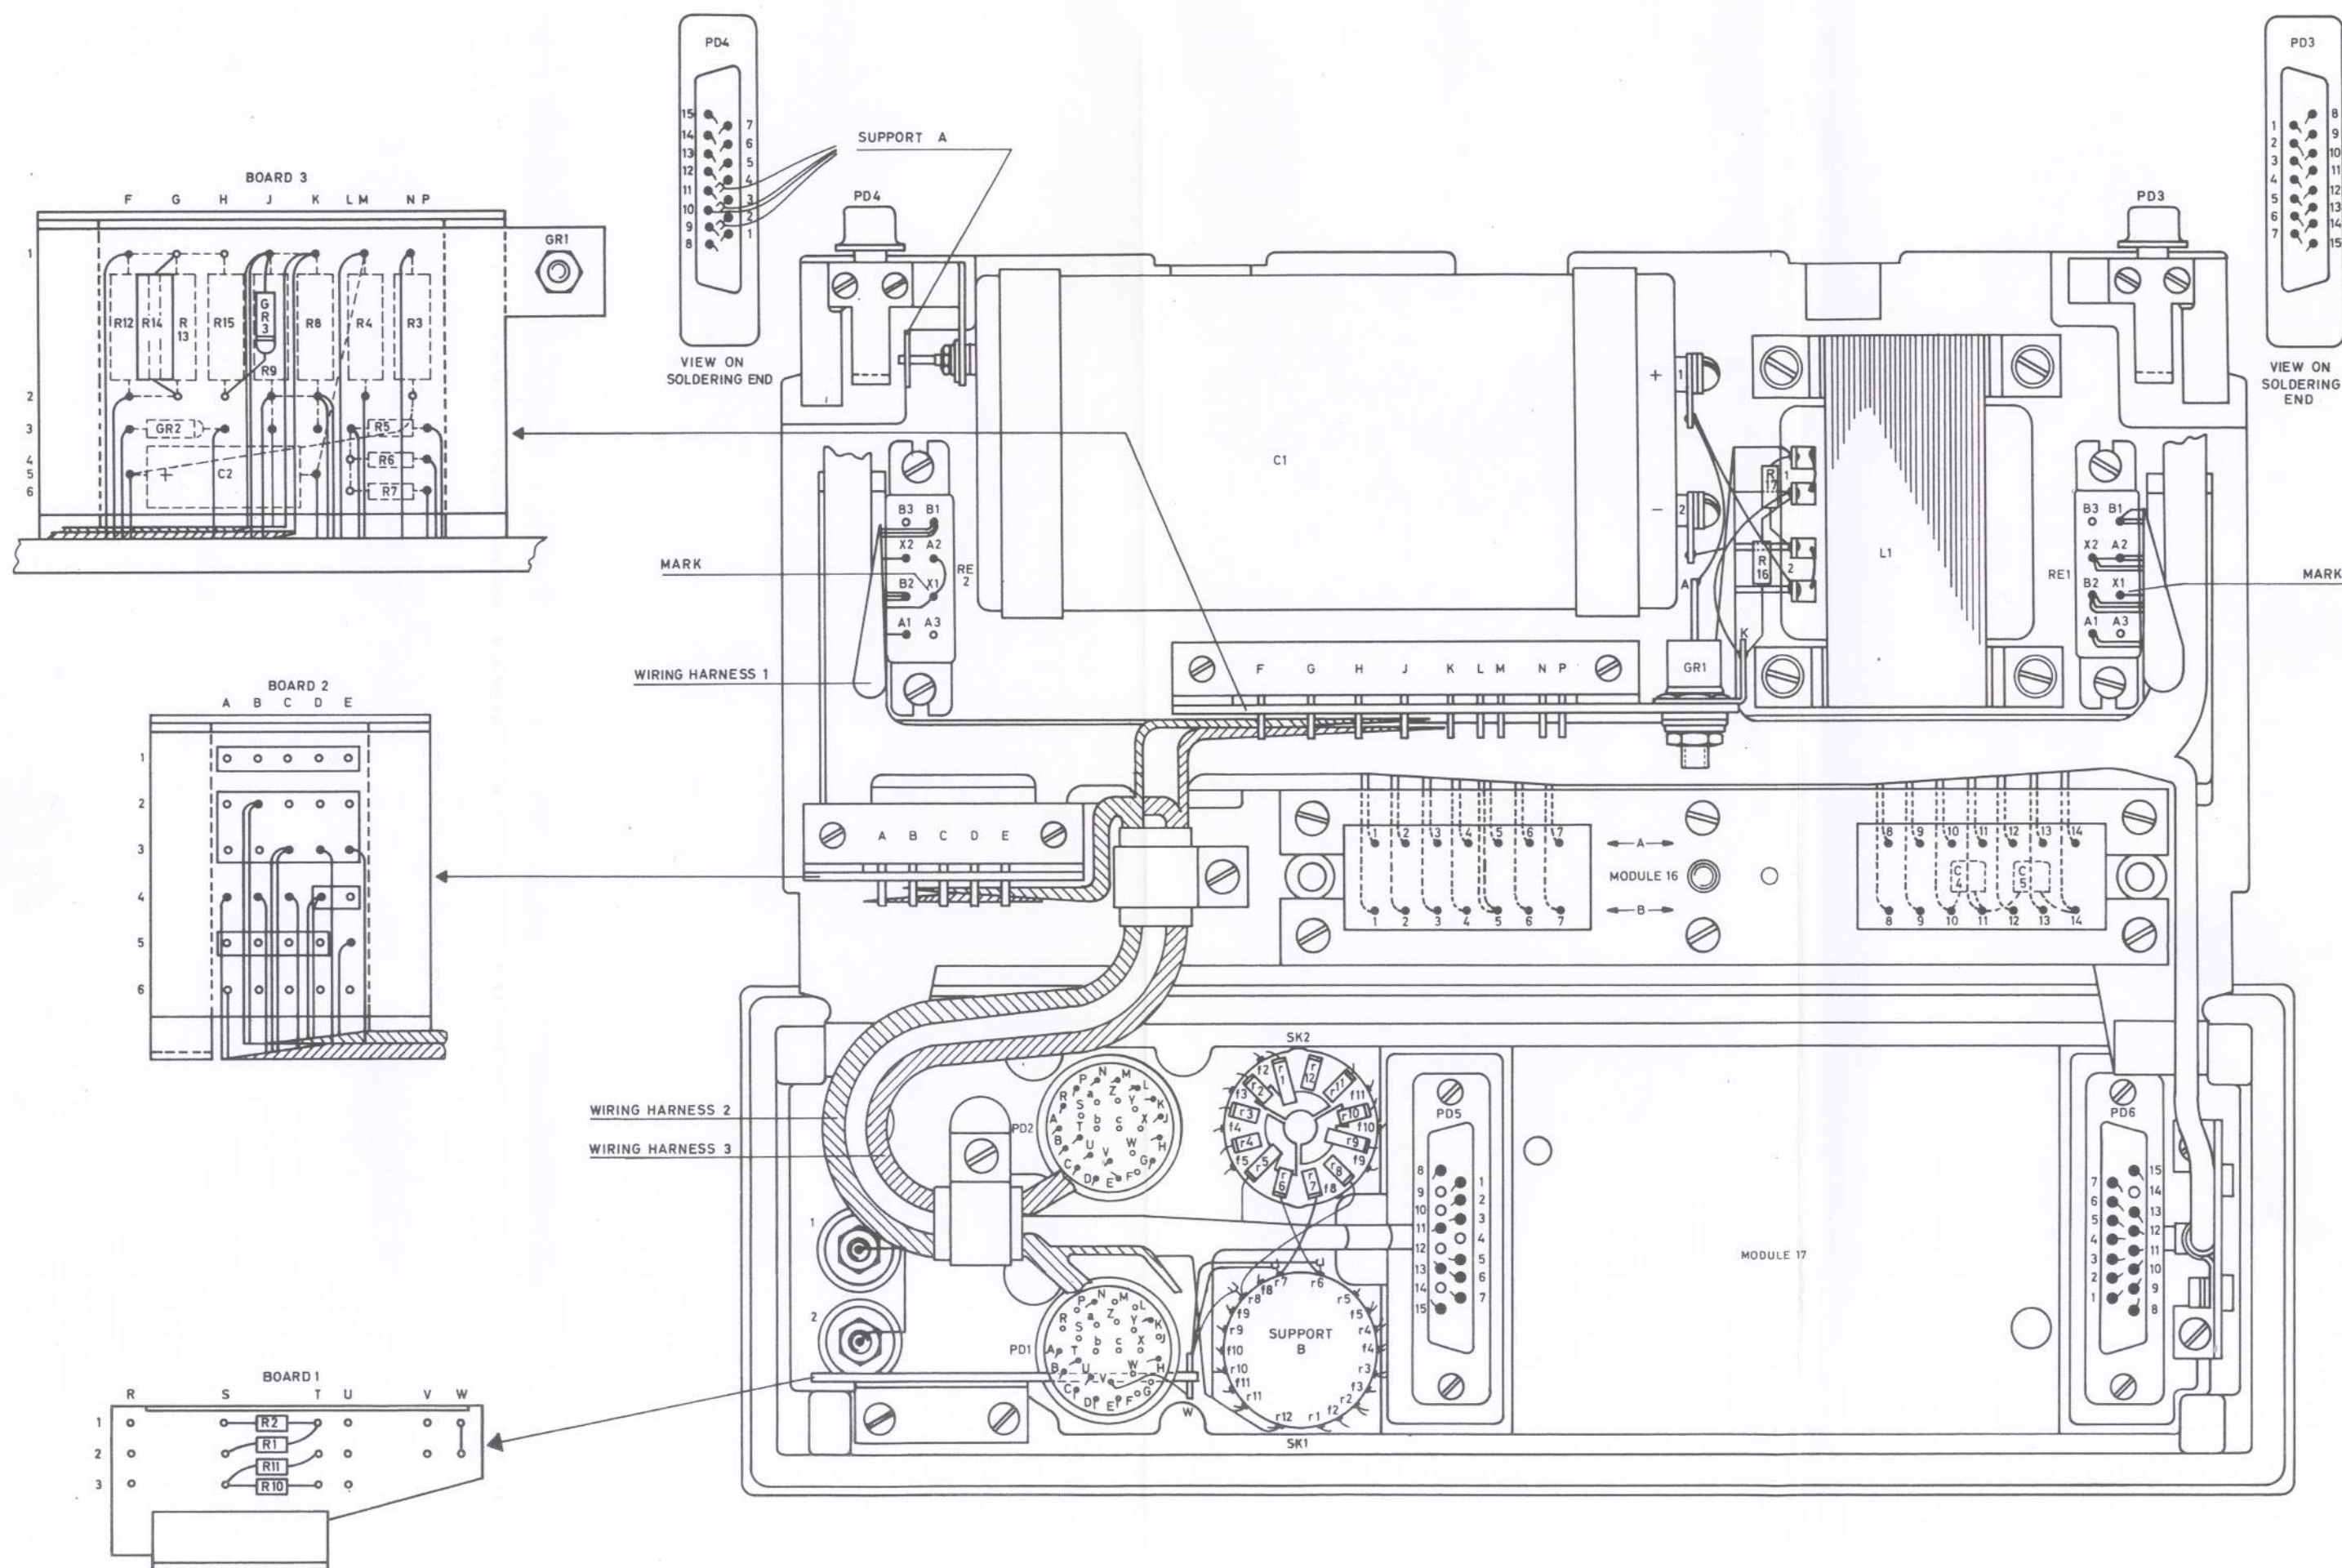

WIRING FRAME ASSEMBLY (MOD. 18)
FIGURE 8
N.V. PHILIPS' TELECOMMUNICATIE INDUSTRIE — Copyright reserved

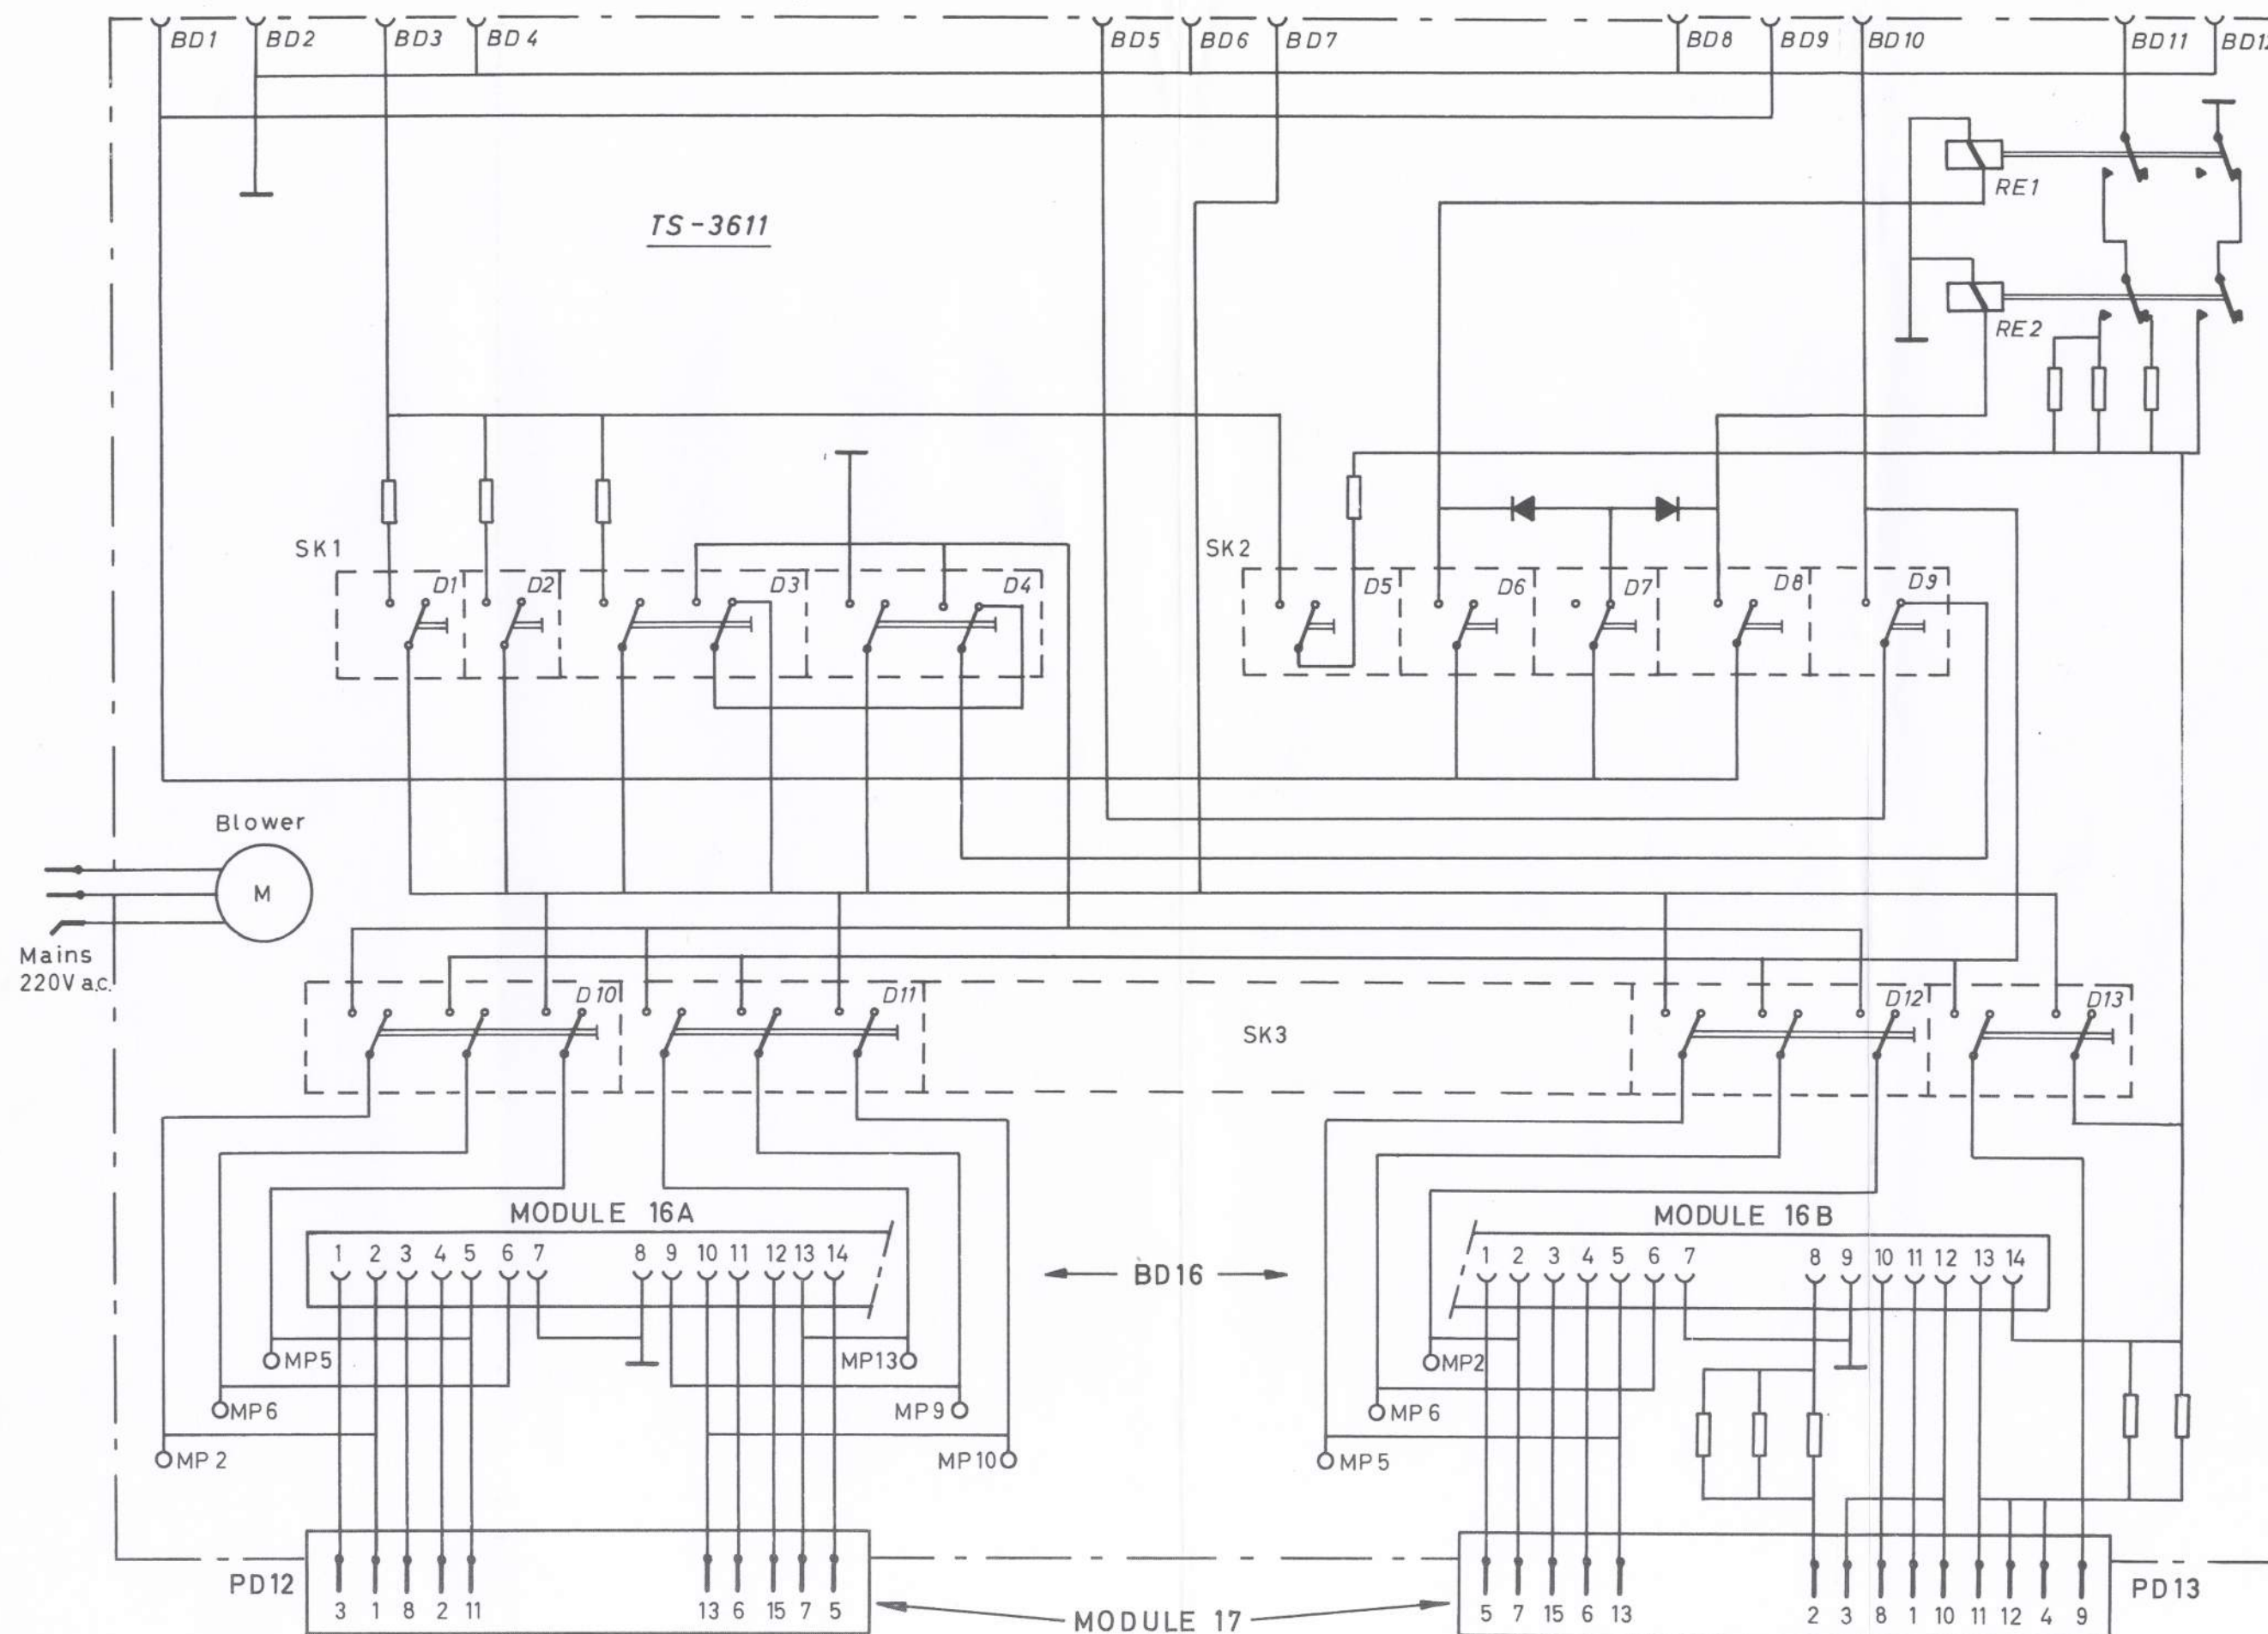

CIRCUIT DIAGRAM MODULE TESTER TS-3611
FIGURE 9