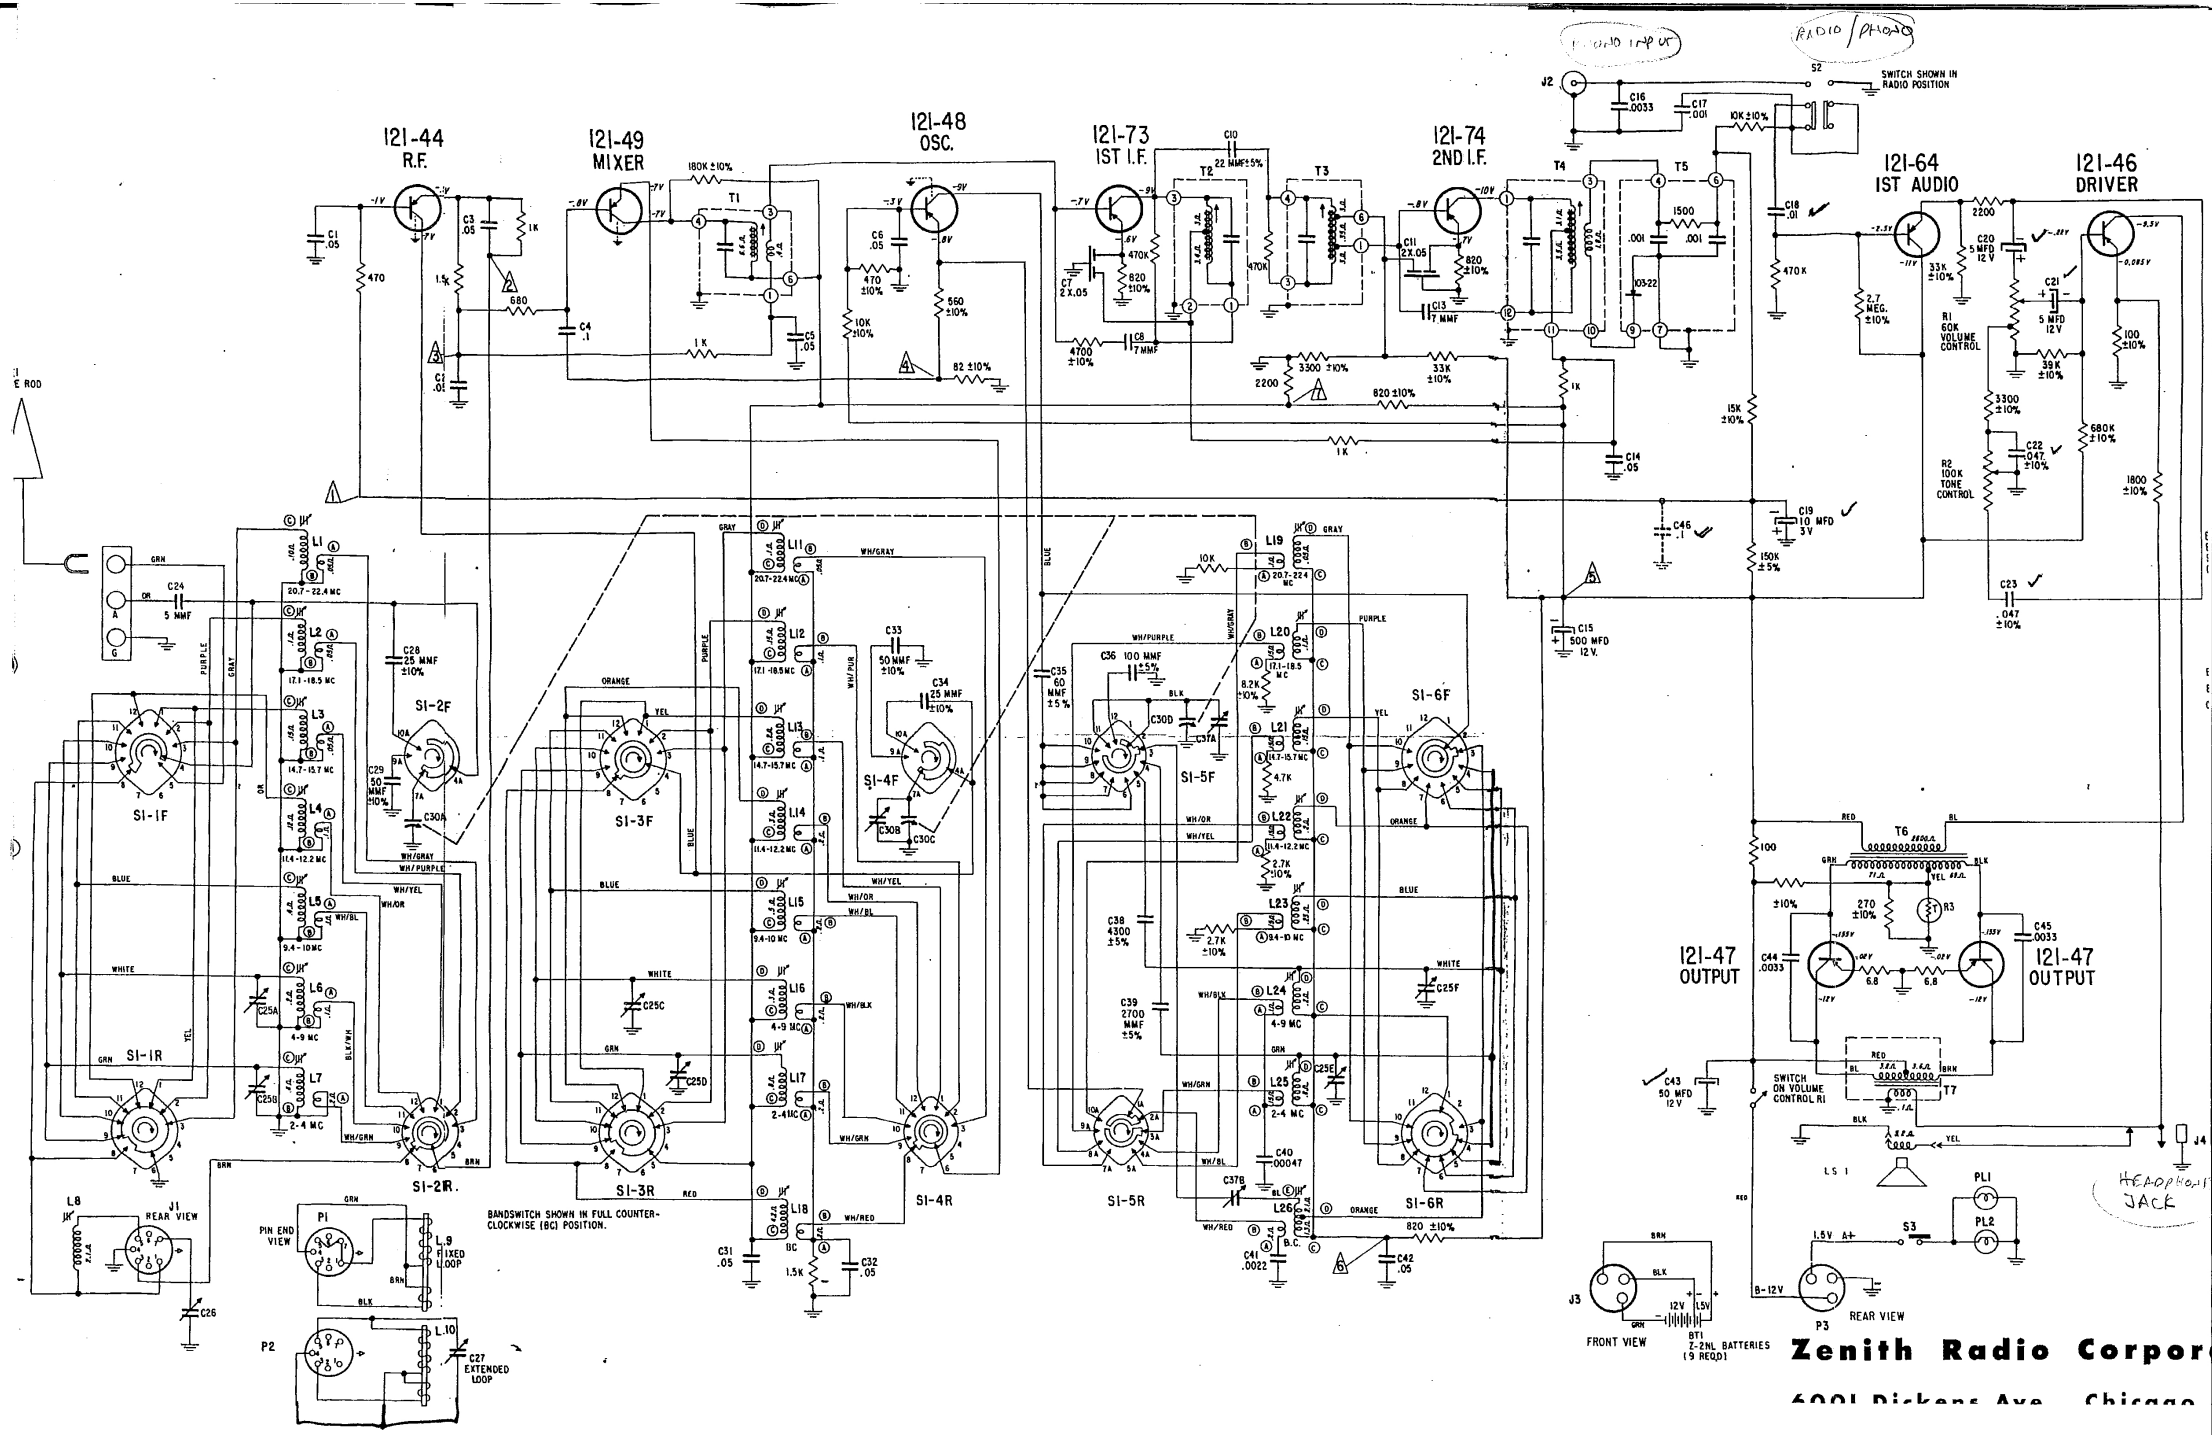
121-44
R.F.
121-49
MIXER
121-48
OSC.
121-73
1ST I.F.
121-74
2ND I.F.
121-64
1ST AUDIO
121-46
DRIVER
121-47
OUTPUT
121-47
OUTPUT
RADIO / PHONO
SWITCH SHOWN IN RADIO POSITION
SWITCH ON VOLUME CONTROL R1
R1 60K VOLUME CONTROL
R2 100K TONE CONTROL
BANDSWITCH SHOWN IN FULL COUNTER-CLOCKWISE (BC) POSITION.
PIN END VIEW
REAR VIEW
FRONT VIEW
L.9 FIXED LOOP
L.10 EXTENDED LOOP
BT1 1-2NL BATTERIES (9 REQ.D)
HEADPHONE JACK
Zenith Radio Corpor